



PROMARK OFFROAD

1. Lay chains out flat, remove all tangles. When chains are placed on tires, the **V-BARS** should face out and cross chain hook eyes must face up. **DAMAGE** to your tires could result if **V-BAR** or hooks face against tires. (SEE **DIAGRAM #1.**)
2. Lay chain over tire, cross chain hook eyes up and fastener on the outside of tire. Tuck the first cross chain (side chain ends without fasteners) under tire. (SEE **DIAGRAM #2.**)
3. Move tractor until fastener is axle high. (SEE **DIAGRAM #3.**)
4. Fasten **INSIDE** hook to proper link of **INNER** side chain that will allow the cross chain to be straight across the tire tread. (SEE **DIAGRAM #4.**)
5. Remove slack and hook outside fastener. Make chain as tight as possible by hand without the use of tools. Drive approximately 1/4 mile, stop and retighten. (SEE **DIAGRAM #5.**)

- **Follow directions for installing chains**
- **Apply as tightly as possible by hand for maximum life**

★ ★ **CAUTION** ★ ★

- ✓ Check owner's manual for correct tire pressure.
- ✓ Maintain a tight to snug fit throughout use. Adjust periodically to keep cross chains straight across tire tread.
- ✓ Excess links of side chain can be removed or wired back.
- ✓ **ACCELERATE SLOWLY!**
- ✓ **DO NOT EXCEED 5 MPH.**
- ✓ Avoid locking wheels when braking.
- ✓ **REMOVE** tire chains on bare roads.
- ✓ Avoid hitting curbs with tire chains.

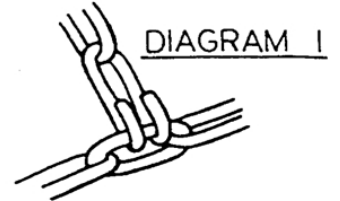


DIAGRAM 1

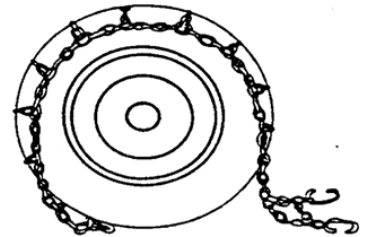


DIAGRAM 2

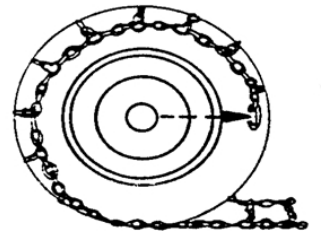


DIAGRAM 3

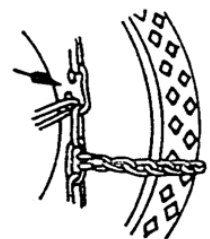


DIAGRAM 4

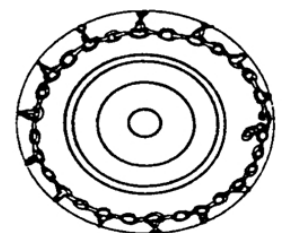


DIAGRAM 5